



# Leclerc Looms

Since 1876



1573 Savoie  
C. P. 4  
Plessisville, Qc.  
G6L 2Y6

TEL: 819-362-2408  
FAX: 819-362-2045

## NEW PENELOPE II 22½" weaving width 2530-00000

### PARTS AS SHIPPED:

1 Multibits screwdriver



1 adjustable wrench



2 high impact styrene rigid heddle  
6 treads per inch

2 cranks

2 flat shuttles 28"

10, 12" (31cm) loop cords for lashing

2 lease sticks

2 (steel) warp rods


1 reed hook 6141-7000

2 Warping blocks

Loom Prepared by: \_\_\_\_\_

Inspected by: \_\_\_\_\_

Date: \_\_\_\_\_

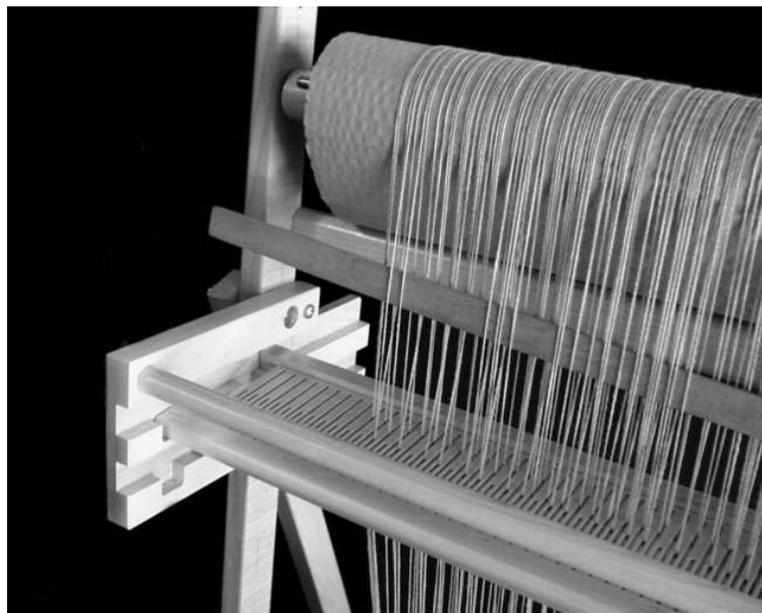



1x Main frame



1x Sliders cross post



1x Back post section



1x Left side reed slider



1x Right side Slider



2x Carriage bolts 1/4" x 2.5"




4x Washers 1/4"


2x Washer 3/16"



2x Nuts with Nylon 1/4"



2x Round Head screw #12, 1.25"




2x Flat head screw #8, 1"





2 Machine screw 1/8" x 1.25"




Using the 2.5" x 1/4" carriage bolts, assemble the sliders and the back post assembly to the main frame.  
NOTE: The right slider must be installed on the right side of the loom.  
Place 1 1/4" washer between the main frame and the back post assembly.  
Secure the assembly with a washer and a nylon lock nut. Do not overtighten.

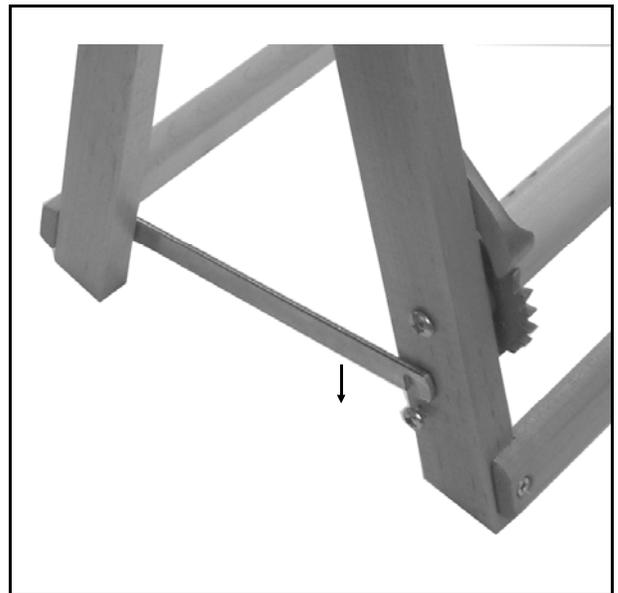

Open the back post assembly and latch the hooks. Set the screws to a snug fit.

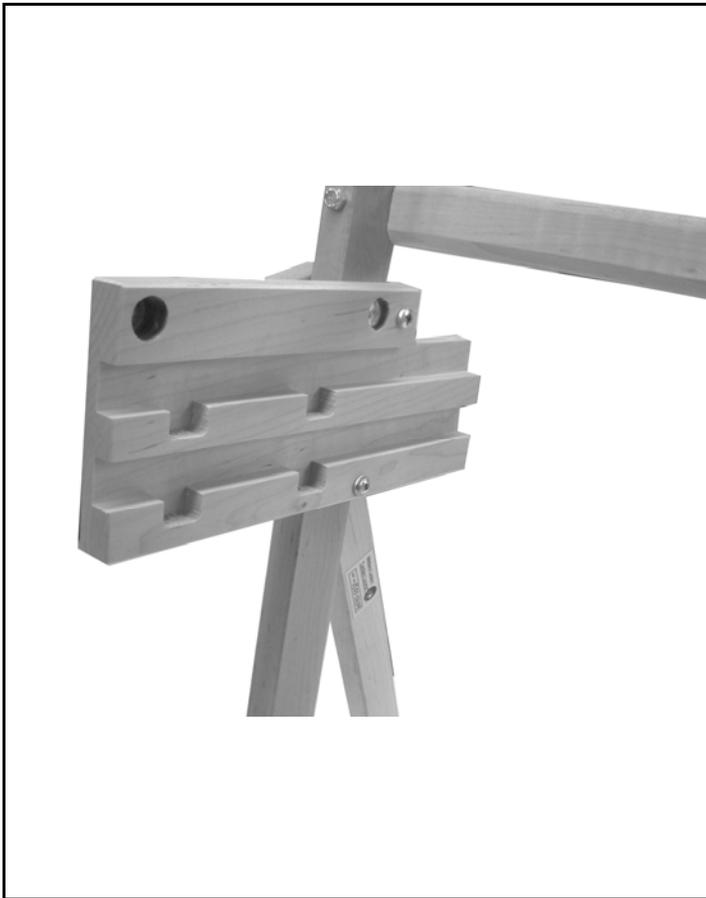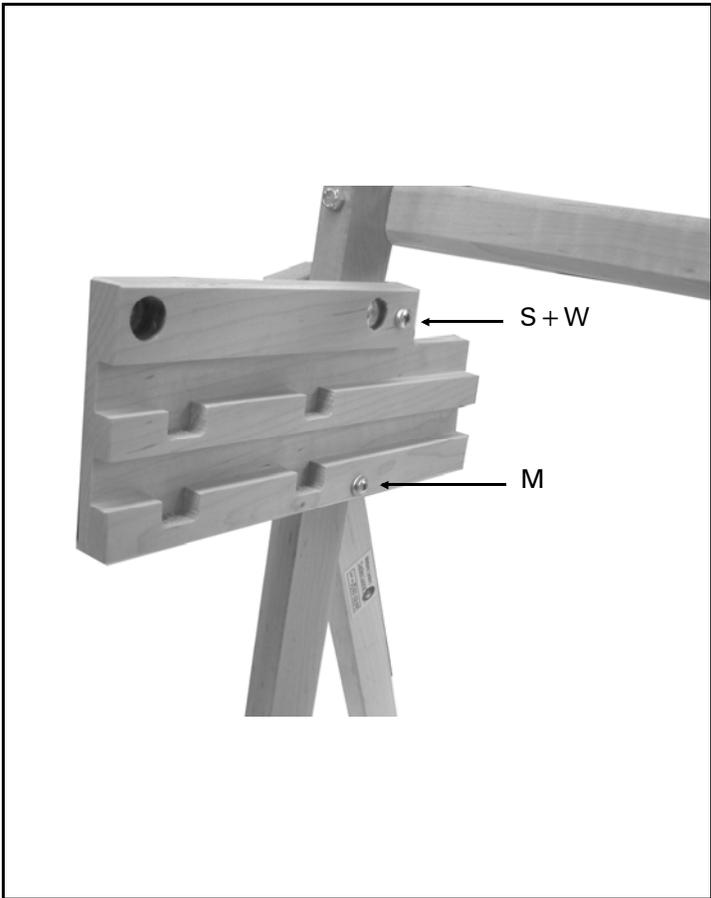

Affix the sliders with the 2 machine screws (M) and 2x 3/16" washers (W) to the metal inserts in the main frame. Then secure using the #12, 1 1/4" screw (S) "

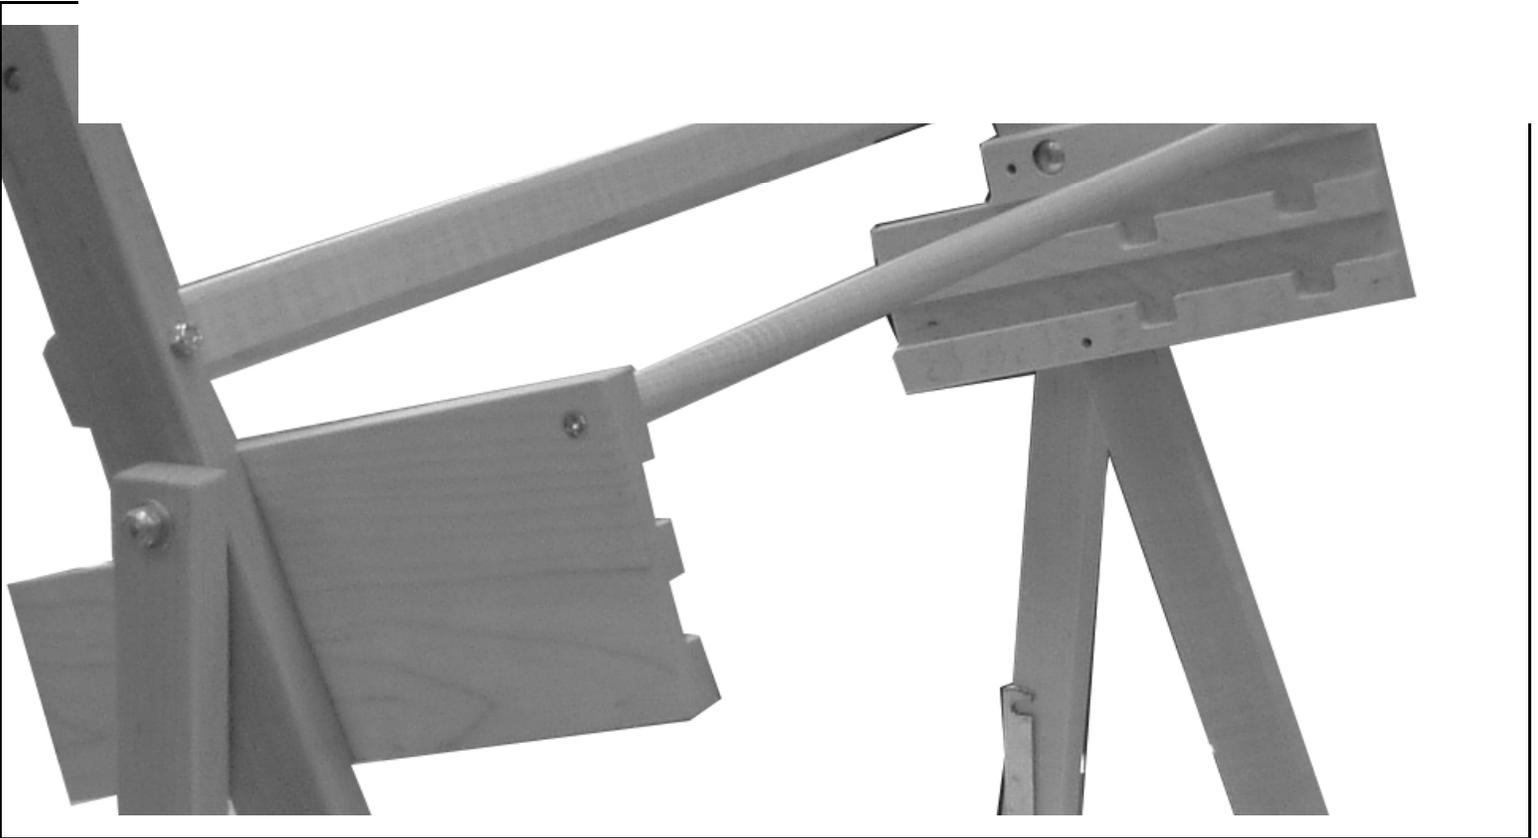

Install the middle slide post using the 2, #8, 1" flat headed screws. Do not overtighten. If the reeds do not slide properly, loosen the slide post slightly.

## PREPARING (Stringing) WARP AND CLOTH BEAMS

1) Into 5 evenly chosen holes on each beam, thread one length of the loop cord.

2) Thread each loop cord back thru itself, useing the first hole in the Cord, as it comes out of the beam and pull tight.

3)Useing the last hole of free end on each Cord, pull a portion of the Cord thru the hole forming a Loop. ( A crochet hook can help you)

4) Slip a Bar thru each loop of all cords and pull tight.(See diagram)



Always maintain a good tension on the warp when weaving.

**PROMPTLY CALL YOUR DEALER OR LECLERC FOR ANY QUESTIONS.**

LECLERC LOOMS  
P.O. BOX 4  
1573 SAVOIE  
PLESSISVILLE QC. CANADA  
G6L 2Y6  
819-362-7207  
Fax: 819-362-2045  
email: [info@leclerclooms.com](mailto:info@leclerclooms.com)  
[www.leclerclooms.com](http://www.leclerclooms.com)